


# Peak Partners

Web-Programmable Thermostat  
Homeowner's Manual

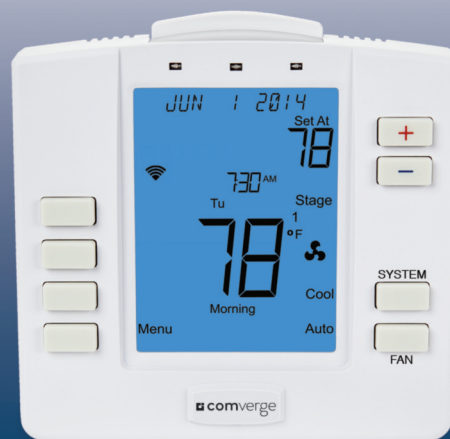

Look inside for a complete guide to the setup and operation of your new thermostat.

# Table of Contents

- Step 1: Getting Started .....4-6
  - A. Thermostat Buttons and Indicators .....4
  - B. Thermostat Display.....5-6
- Step 2: Main Menu and Thermostat Settings.....7-15
  - A. WiFi Settings Menu.....7-10
  - B. Filter Timer Settings Menu.....11-12
  - C. Reset Filter Timer .....12
  - D. LCD Backlight Settings Menu .....13
  - E. Nightlight Settings Menu .....13-14
  - F. Keypress Beep Confirmation Menu .....14
  - G. Time-of-Day (TOD) Recovery .....15
- Step 3: How to Set a Temperature “Hold” .....16-17
  - A. Temporary Hold.....16
  - B. Timed Temporary Hold .....16-17
  - C. Permanent Hold .....17
  - D. Ending a Hold.....17
- Step 4: Using the Keypad Lock .....18-20
  - A. Partial (PART) Lockout .....18
  - B. Full (FULL) Lockout .....19
  - C. Unlocking the Keypad .....20
- Troubleshooting .....21-23

©2014 Converge, Inc. All rights reserved. Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

Your Peak Partners thermostat controls your central air conditioning and heating system. The types of compatible systems include:

**Central Air Conditioners:**

- Single-Stage
- Multi-Stage

**Heat Pump\*:**

- Single-Stage
- Multi-Stage

**Furnaces:**

- Single-Stage Gas or Oil
- Multi-Stage Gas or Oil
- Single-Stage Electric
- Multi-Stage Electric
- Two-Wire Hydronic
- Millivolt Heat System

**Aux Heat:**

- Single-Stage Electric
- Multi-Stage Electric

## IMPORTANT

**All programming functions are available through the Peak Partners Dashboard. The “7-Day/4-Interval” programming function cannot be done manually at the thermostat. It can only be done through the Peak Partners Dashboard.**


You may enter the Peak Partners Dashboard from anywhere you have Web access, using your smartphone, tablet, or computer. You may manually use the thermostat to raise or lower the temperature in your home, and set all other HVAC features.



All compatible components are connected and configured by the Peak Partners technician during installation.

\*If you have a heat pump, make sure your settings are no more than 2° between the warmest temperature (the one you set when you are home) and coolest temperature (the one you set when you are away). Large temperature differences may enable the auxiliary heating mode and potentially cause your electric bill to increase significantly in the fall and winter months.

## Step 1: Getting Started


### A. Thermostat Buttons and Indicators

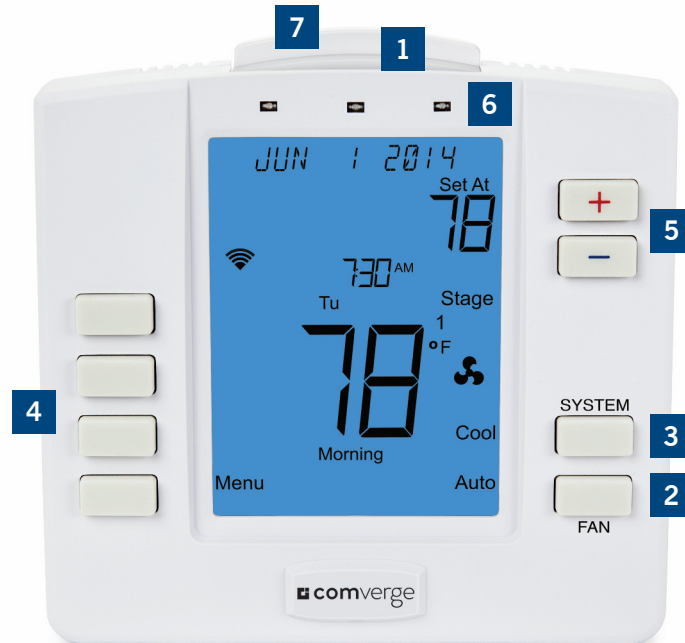

<b>1 Nightlight</b>	Enables or disables illumination. Provides night light function. Can be used to activate the LCD back light.
<b>2 FAN Button</b>	Changes fan setting ( <b>Auto/On</b> )
<b>3 SYSTEM Button</b>	Changes operating mode ( <b>Off, Cool, Off, Heat, Aux Heat</b> [displayed on heat pump units only] and <b>Off</b> )
<b>4 User Program Buttons</b>	Facilitates various operations in different menus
<b>5 Temperature Setpoint Buttons</b>	Changes temperature up  or down 
<b>6 LEDs</b>	Indicates status of conservation periods: voluntary (green), mandatory (red), pending (flashing), and active (solid)
<b>7 Module Slot</b>	Houses the communications radio module

## Step 1: Getting Started


### B. Thermostat Display

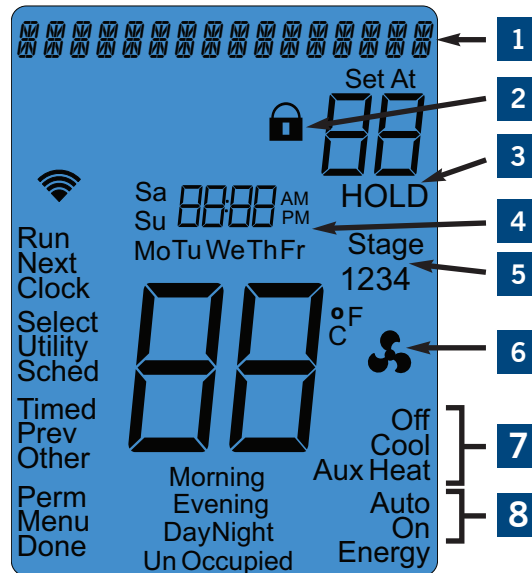

- |          |                                |   |
|----------|--------------------------------|---|
| <b>1</b> | <b>Messaging Display</b>       | Displays current date, HVAC system status, conservation period status, and utility-related messages. In the event of a power outage, the clock will maintain the correct time for 24 hours  |
| <b>2</b> | <b>Lock Icon</b>               | Confirms keypad lockout, preventing unwanted changes to thermostat settings   |
| <b>3</b> | <b>HOLD Indicator</b>          | Appears only when thermostat program is overridden  |
| <b>4</b> | <b>Time and Day Display</b>    | Indicates current time and day of the week  |
| <b>5</b> | <b>HEAT/COOL Stage Display</b> | When ON, the indicated stage is active; when OFF, the state is inactive; when flashing, compressor delay is active  |
| <b>6</b> | <b>Fan Status</b>              | Appears only when fan is on   |
| <b>7</b> | <b>System Status</b>           | Displays current operation mode according to system configuration as set by installer <ul style="list-style-type: none"> <li>• <b>Off</b> – system is OFF</li> <li>• <b>Cool</b></li> <li>• <b>Off</b></li> <li>• <b>Heat</b></li> <li>• <b>Aux Heat</b></li> <li>• <b>Off</b></li> </ul> |
| <b>8</b> | <b>Fan Mode</b>                | <ul style="list-style-type: none"> <li>• <b>Auto</b></li> <li>• <b>On</b></li> </ul>  |

## Step 1: Getting Started

### B. Thermostat Display (continued)

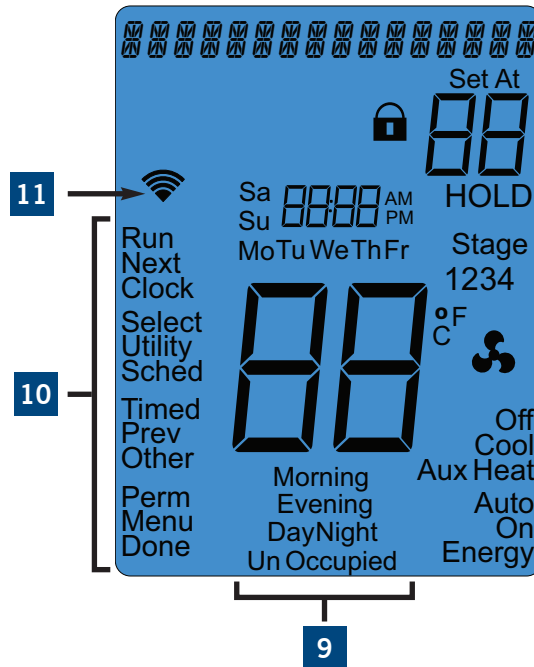

**9 Time Of Day Program Interval** Displays current programming interval setting

**10 User Buttons Display (Programming Buttons)** Actions to be performed when corresponding user button is pressed

**11 Link Status** Indicates status of WiFi link


NOTE: Should a communications error (COMM ERROR) display in the thermostat messaging area, please call Peak Partners Program at 855.350.1464 immediately. The message indicates a communication problem between your thermostat and the utility. In some instances, the utility will program the thermostat to also display whom to contact during a communications error.

## Step 2: Main Menu and Thermostat Settings

The Homeowner Programming Menu table (next page) summarizes the configuration items that the homeowner can adjust, and provides a convenient space to keep track of your settings.

To enter the Homeowner Programming Menu:

1. Ensure the thermostat is at the home screen (see example at right).
2. Press the **Menu** button. The display will show the first level of the Homeowner Programming Menu.
3. While in the Homeowner Programming Menu:
  - The **+** and **-** buttons change settings
  - The **Next** and **Previous** buttons move from one item screen to another
  - The **Done** button exits the Homeowner Programming Menu

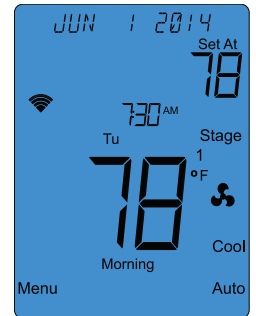


### A. WiFi Settings Menu

This menu displays the name of the wireless Internet access network to which the thermostat is connected. In this menu, you may reset your wireless Internet connection [**RESET WIFI**] or remain connected to the existing network [**CLIENT**]. The default setting is **CLIENT**.


#### STEP 1: Return Thermostat to WiFi Configuration Mode

Sometimes it might be necessary to move the wireless Internet accessible thermostat to a different wireless Internet access network, change your network name or change your network password. To do this, you will need to disconnect your Peak Partners thermostat for your wireless Internet network as follows:


1. On the Main Menu screen, press the **Menu** button.

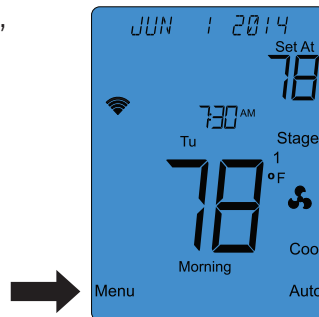


2. Press the **Other** button. The thermostat will display the **WIFI SETTINGS** menu.

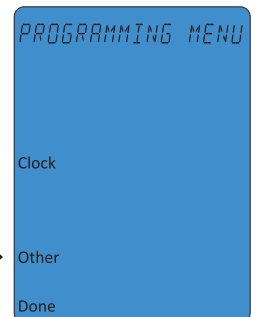

3. Press the **Select** button. The message area of the thermostat will display the wireless Internet access network name (SSID) to which you are currently connected.

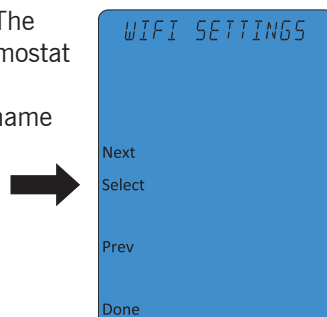


4. Press the **Next** button. The top line of the message area will flash **CLIENT**.

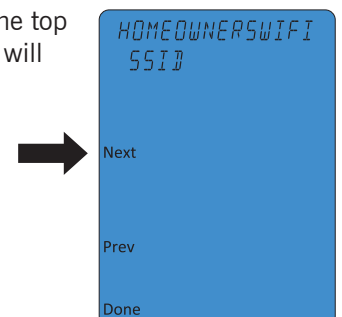


## Step 2: Main Menu and Thermostat Settings (continued)

5. Press the  button to advance the display to **RESET WIFI**.

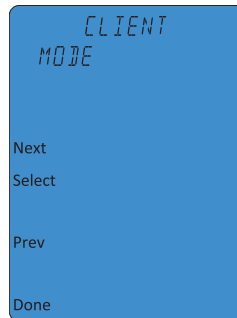

6. As **RESET WIFI** is flashing, press the **Select** button.

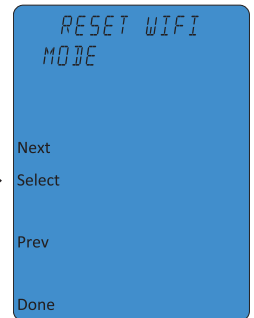


### STEP 2: Connect to a Wireless Internet Network


In the configuration mode, the Peak Partners thermostat acts like a wireless Internet access point. This allows the homeowner to use any wireless Internet-enabled device to connect to the thermostat and configure it to use their WiFi settings with a standard Web browser.

NOTE: If any settings on your wireless Internet router are changed at any time during this step, you must cycle the power to your thermostat and restart this procedure.


1. On the thermostat Main Menu screen, press the **Menu** button.

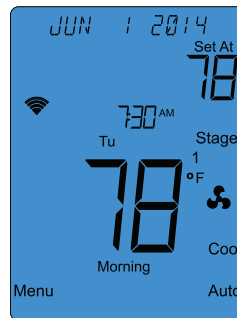


2. Press the **Other** button. The thermostat will display the **WIFI SETTINGS** menu.

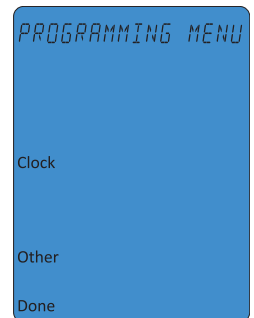

3. Press the **Select** button.

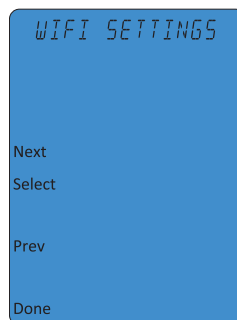

4. The message area of the thermostat will display **THERMOSTAT** followed by the last four digits of the thermostat's WiFi module serial number. This is the network name (SSID) you will use to connect to the thermostat.

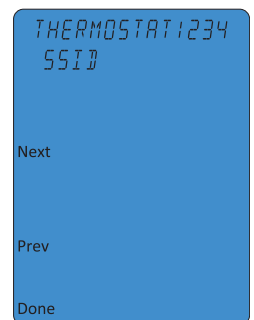


If you continue to have connectivity problems, please call the Peak Partners customer service center at 855.350.1464.




## Step 2: Main Menu and Thermostat Settings (continued)

5. Use a WiFi-enabled smartphone, tablet, or computer to connect to the thermostat. Open the WiFi settings menu on your device and select the **THERMOSTAT** name displayed in **step 4**.

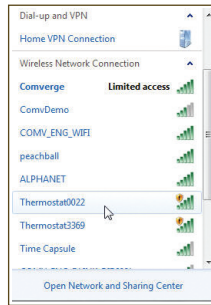


6. You may receive a notification that you are connected to a non-secure network. Select **OK** or **CONTINUE**.

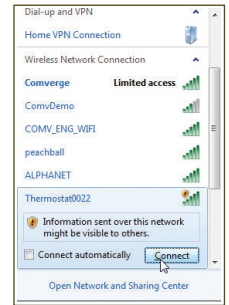

7. Open the web browser on your device. If your browser is set to automatically open a Web page, the IntelliTEMP configuration page should automatically appear.
8. If the settings page does not appear after a few seconds, type "directlink/settings" in the address bar, then press **ENTER**. If the settings page still does not appear, on the thermostat Main Menu screen, press the button next to **Menu**. Then press the button next to **Other**. The thermostat will display the **WiFi SETTINGS** menu. Press the button next to **Select**. The message area of the thermostat will display the WiFi network name (SSID) to which you are currently connected. Press the button next to **Next**. The IP Address of your device will be displayed in the thermostat's message area. In the browser bar of your device, type "http://" followed by the IP address displayed on the thermostat. Press **ENTER**.



9. Use the pull-down on the settings page to select your home network name.

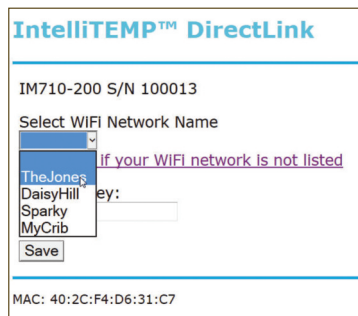

10. If your wireless Internet router is set to hide the network name or your network is not listed in the pull-down, click on the link below the pull-down to display the manual settings page.




11. Enter the network password for your network.
12. Once all fields are filled in correctly, click on the **Save** button.



## Step 2: Main Menu and Thermostat Settings (continued)

13. The settings page will now show an overview of the settings you entered. If all settings are correct, click on **Apply**. If you need to correct any settings, click on **Cancel**.

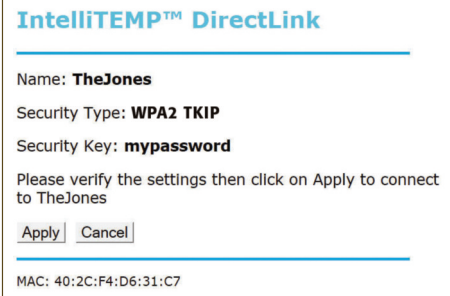

**IntelliTEMP™ DirectLink**

---


Name: **TheJones**  
Security Type: **WPA2 TKIP**  
Security Key: **mypassword**

Please verify the settings then click on Apply to connect to TheJones

---

MAC: 40:2C:F4:D6:31:C7

14. After clicking on **Apply**, the web page will now display the form shown on the right. The WiFi thermostat will close the wireless Internet connection to your device. It will then attempt to connect to your wireless Internet accessible router. If there was an error detected in one of the settings, you will be prompted to return to the settings page and correct the error.

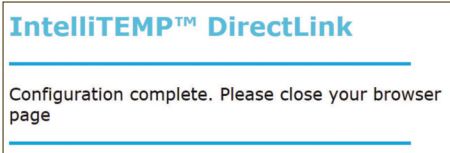

**IntelliTEMP™ DirectLink**

---

Configuration complete. Please close your browser page

---


## Step 2: Main Menu and Thermostat Settings (continued)

### B. Filter Timer Settings Menu


The filter timer is an indicator to the homeowner to check and/or replace the HVAC air filter.

Filter Timer Menu allows you to set the number of days before the **CHANGE FILTER** alert appears in the thermostat display. It also allows you to disable the filter timer and the Reset Filter Timer. The default setting is 90 days, but filters should be checked every month. How often you change them can impact the quality of your indoor air and the efficiency of your HVAC system. To set/reset the filter timer:


1. Press the **Menu** button. The **Programming** menu screen title will appear in the messaging area.

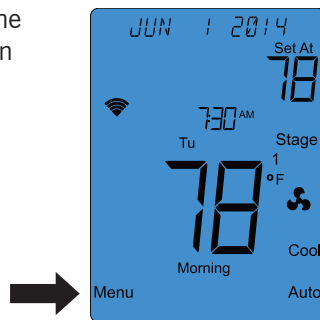

2. Press the **Other** button to advance the menu screen to the **WIFI SETTINGS** menu.

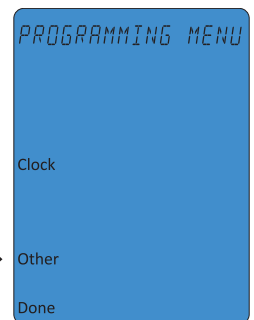

3. Press the **Next** button to advance to the **FILTER TIMER** screen.

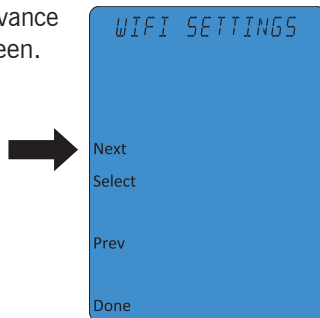


4. Set the number of days until the **CHANGE FILTER** message will appear in the display window by pressing the **+** or **-** button. The day setting will advance or regress in 5-day increments.




5. Press **Done**.

To disable the filter timer:

1. Press the **Menu** button. The **Programming** menu screen title will appear in the messaging area.

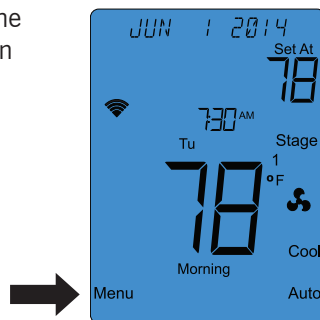


2. Press the **Other** button to advance the menu screen to the **WIFI SETTINGS** menu.

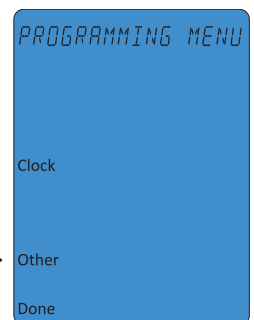


## Step 2: Main Menu and Thermostat Settings (continued)

3. Press the **Next** button to advance to the **FILTER TIMER** screen.


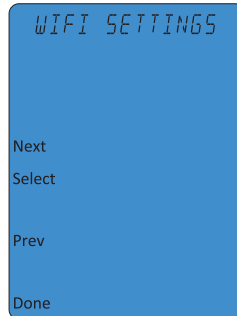


4. Press the **+** or **-** button to reach Off.

5. Press **Done**.

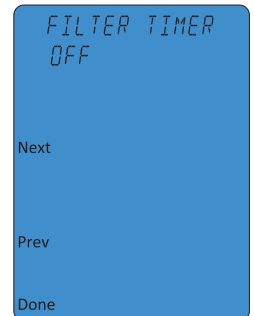

### C. Reset Filter Timer

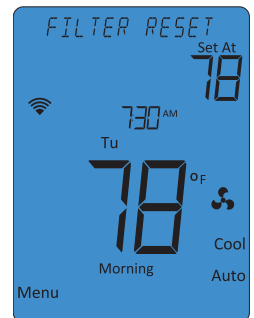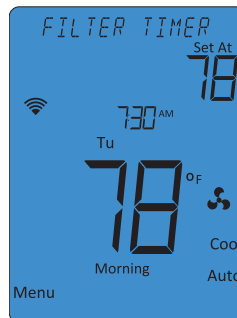

#### Filter Timer Reset

The filter timer is an indicator to the homeowner to check and/or replace their HVAC air filter. The filter timer can be reset at any time—whether there is an active **CHECK FILTER** message display or not. The filter timer can be reset from within the **FILTER TIMER** user programming menu by pressing the **SELECT** button. The countdown timer (flashing value) will be reset to the user selected filter timer value displayed at the end of the top display line. When returning to the main operating screen, the **FILTER RESET** message will be displayed and **CHECK FILTER** message will no longer be displayed to confirm that the filter has been reset.

There is also an easy way for the user to reset the filter timer value to the default value from the main operating screen without the need to enter the programming menu. To reset the filter timer, press and hold the **FAN** button for 3 seconds until the message **FILTER RESET** is displayed. The filter timer will be reset to the user defined value and the **CHECK FILTER** message will no longer be displayed in the message display area.

NOTE: If the **FILTER TIMER** in the user settings menu is set to **OFF**, this filter timer reset is not being used.


## Step 2: Main Menu and Thermostat Settings (continued)

### D. LCD Backlight Settings Menu


This menu allows you to choose when the LCD backlight illuminates.

To choose when the backlight illuminates:


1. Press the **Menu** button. The menu screen title will appear in the messaging area.

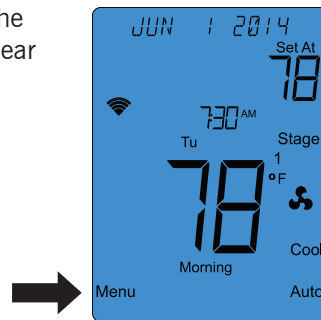


2. Press the **Other** button to advance the menu screen to the **WIFI SETTINGS** menu.

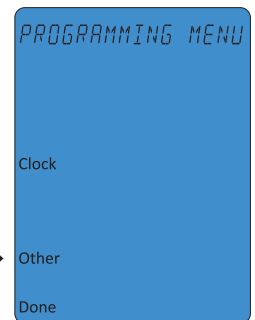

3. Press the **Next** button to advance to the **LCD BACKLIGHT** screen.

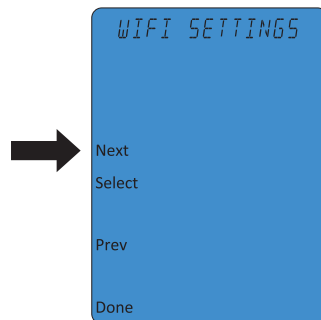

4. Use the **+** or **-** button to select from:  
**AUTO** (default) Illuminates whenever any button is pressed.  
**ON** Continuous illumination.  
**MANUAL** Illuminates only when **NIGHTLIGHT** button is pressed.

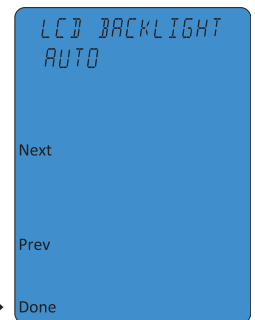


5. Press **Done**.


### E. Nightlight Settings Menu

This menu allows you to choose when the nightlight illuminates.

1. Press the **Menu** button. The menu screen title will appear in the messaging area.

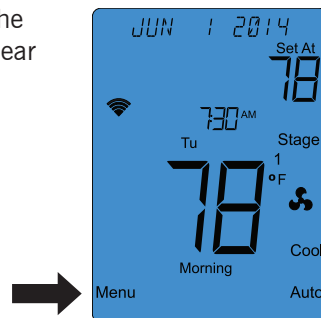


2. Press the **Other** button to advance the menu screen to the **WIFI SETTINGS** menu.

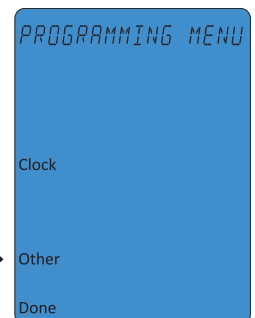


## Step 2: Main Menu and Thermostat Settings (continued)

3. Press the **Next** button to advance to the **NIGHTLIGHT** screen.

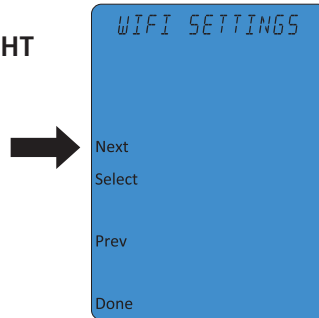

4. Use the **+** or **-** button to select from:  
**OFF** (default) Always off.  
**ON** Always on.


5. Press **Done**.

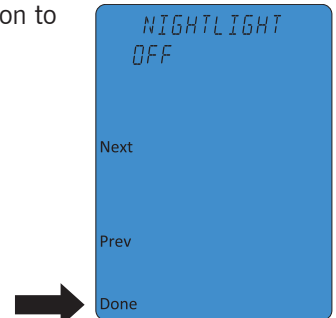


## F. Keypress Beep Confirmation Menu

This menu allows you to enable or disable an audio beep confirmation of every key press.


1. Press the **Menu** button. The menu screen title will appear in the messaging area.

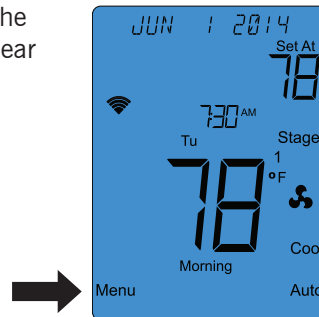

2. Press the **Other** button to advance the menu screen to the **WIFI SETTINGS** menu.

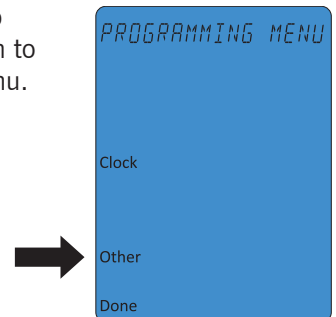


3. Press the **Next** button to advance to the **KEYPRESS BEEP** Confirmation Menu screen.

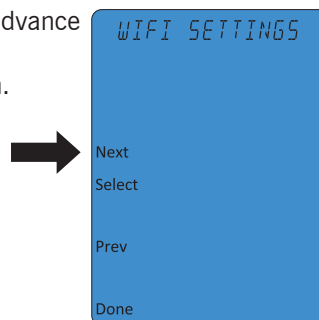

4. Use the **+** or **-** button to select from:  
**OFF** (default) No beep confirmation.  
**ON** Sounds a beep with every key press.

5. Press **Done**.

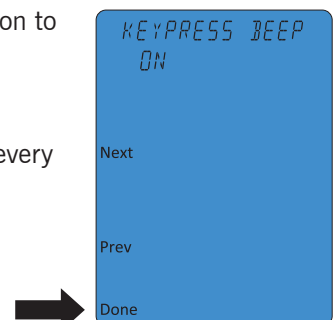


## Step 2: Main Menu and Thermostat Settings (continued)


### G. Time-of-Day (TOD) Recovery

This feature turns your system on before the **TOD** programming time to attempt to reach the set point at the start of the **TOD** period.


1. Press the **Menu** button. The menu screen title will appear in the messaging area.

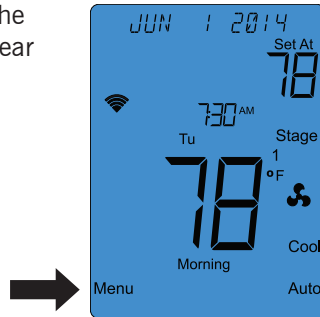


2. Press the **Other** button to advance the menu screen to the **WIFI SETTINGS** menu.

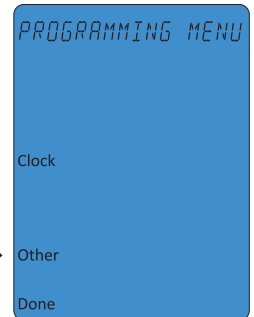

3. Press the **Next** button to advance to the **TOD RECOVERY** screen.

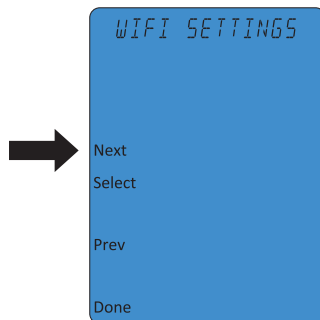

4. Use the **+** or **-** button to select from:  
**ON** Attempt to reach the **TOD** setpoint at the start of the **TOD** period.  
**OFF** Switch to the new **TOD** setpoint at the start of the period.

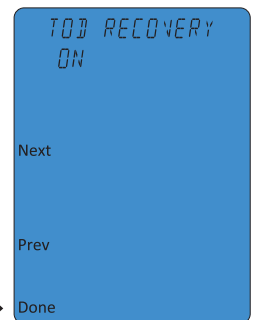

5. Press **Done**.

## Step 3: How to Set a Temperature “Hold”

You can override the thermostat's programmed temperature setpoint at anytime by choosing one of three types of hold operations, explained below. The type you choose determines when the hold will end and the thermostat returns to its programmed schedule.


When you set a hold, the word **HOLD** will be displayed beneath the temperature setpoint on the thermostat display screen. The word **RUN** will be displayed next to the top left button indicating an active hold. The type of hold (Temporary, Timed Temporary, Permanent) will be displayed in the messaging area at the top of the thermostat. This message will appear in rotation with other messages such as the current date and other active thermostat operations.

### A. Temporary Hold


A temporary hold lasts until the start of the next time-of-day program schedule period, or until you manually end it.

To set a temporary hold:

1. Press the **+** or **-** button to adjust the setpoint to the desired temperature.

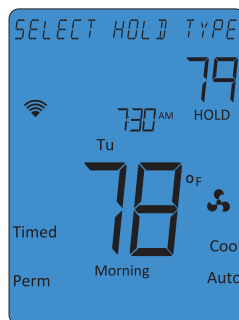

2. Wait 5 seconds for the thermostat to confirm your hold on the display.

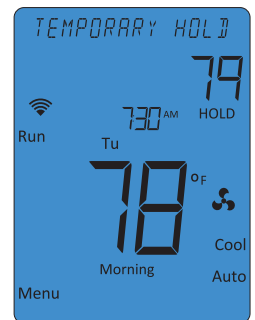

### B. Timed Temporary Hold


A timed temporary hold lasts until the time you have designated it to end, or until you manually end it. To set a timed temporary hold:

1. Press the **+** or **-** button to adjust the setpoint to the desired temperature.
2. The word **TIMED** will display for 5 seconds after you set the hold temperature. Press the button next to it.







## Step 3: How to Set a Temperature “Hold” (continued)

- The current time display in the center of the screen will begin flashing. Press the  button to set the time you want the temperature hold to end.

You may adjust the time in 15-minute increments and set a timed temporary hold for up to 24 hours. Press **Select** when the desired time is displayed. Once the hold time is set, the display returns to the current time.

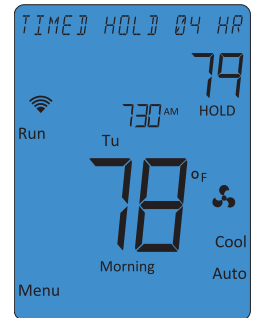
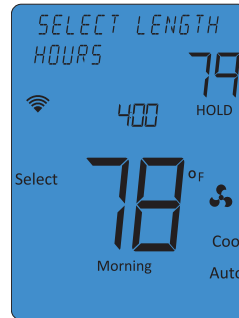


### C. Permanent Hold

A permanent hold lasts until you manually end it. To set a permanent hold:

Press the  or  button to the desired temperature.



The word **PERM** will display for 5 seconds after you set the hold temperature. Press the button next to it.

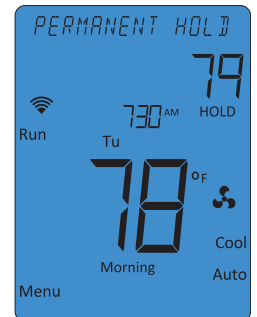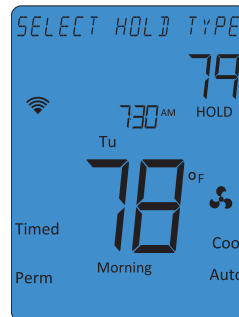

### D. Ending a Hold

To end a temporary or timed temporary hold before the end of its assigned duration, or to end a permanent hold, press the button next to the **RUN** display. This ends the active hold and returns the thermostat to its program schedule.

**NOTE:** When setting a temporary or timed temporary hold, failure to press the button next to the **TIMED** display within 5 seconds, will cause a default to temporary hold. When setting a permanent hold, failure to press the button next to the **PERM** display will also cause a default to temporary hold.

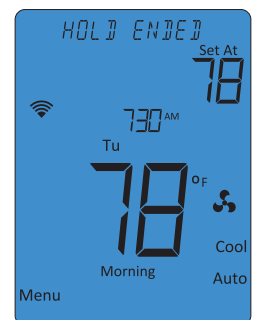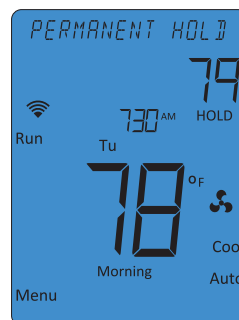


## Step 4: Using the Keypad Lock

The Peak Partners thermostat enables you to limit user access through its keypad lockout feature. This security prevents unwanted changes to the thermostat settings and programming. You may select your level of security from two types of lockouts:


### A. Partial (PART) Lockout

Prevents other users from changing any programming values while still allowing users access to operational changes such as setting a hold or changing the system operation mode. To set a partial lockout:


1. At the main operating screen, press and hold the **+** and **-** buttons simultaneously for 3 seconds.

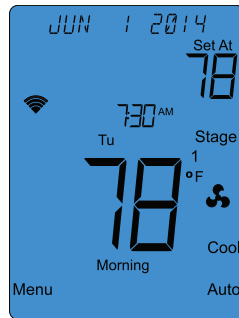


2. The display will change to the **KEYPAD LOCK TYPE** screen with **OFF** flashing. Select **PART** by pressing the **+** or **-** button. Press **Next**.

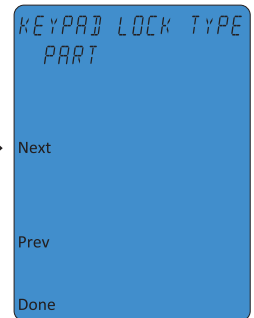

3. Enter a four-digit security code of your choosing. This code will be required to unlock the keypad in the future. To enter the code, press the **+** or **-** button to change the first digit, then press **Next**. Repeat the above process for the last 3 digits, then press the **Done** button.

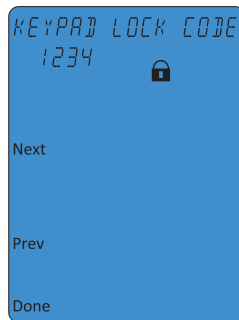



4. Your security code is now saved and the keypad lock is now active. The thermostat will return to the main operating screen and display a temporary **KEYPAD LOCKED** message. The screen will now constantly display a lock icon indicating an active keypad lock.

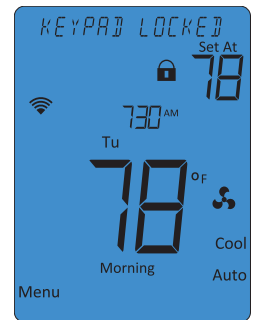




## Step 4: Using the Keypad Lock (continued)

### B. Full (FULL) Lockout



Prevents any type of user activity through the keypad except for turning on the backlight (if it was previously enabled). The user cannot change program settings, mode of operation, fan mode of operation or set/end a hold. To set a full lockout:


1. At the main operating screen, press and hold the  and  buttons simultaneously for 3 seconds.

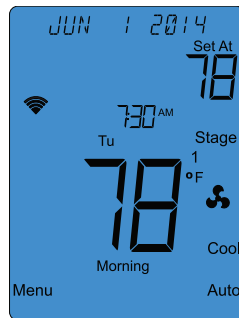


2. The display will change to the **KEYPAD LOCK TYPE** screen with **OFF** flashing. Select **FULL** by pressing the  or  button. Press **Next**.



3. Enter a 4-digit security code of your choosing. This code will be required to unlock the keypad in the future. To enter the code, press the  or  button to change the first digit, then press **Next**. Repeat the above process for the last 3 digits, then press the **Done** button.

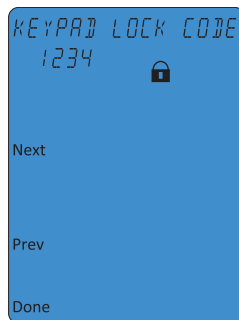

4. Your security code is now saved and the keypad lock is now active. The thermostat will return to the main operating screen and display a temporary **KEYPAD LOCKED** message. The screen will now constantly display a lock icon indicating an active keypad lock.

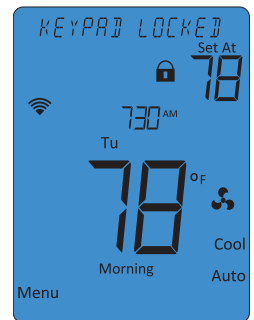



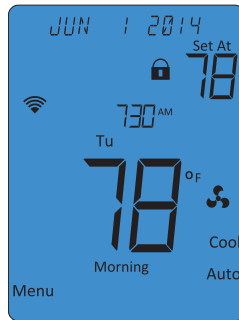
**NOTE:** You will set your four-digit security code the first time you set a keypad lockout. The code will remain the same until you change it manually.



Code	Date


## Step 4: Using the Keypad Lock (continued)

### C. Unlocking the Keypad


1. At the main operating screen, press and hold the  and  buttons simultaneously for 3 seconds.



2. The display will change to the **ENTER LOCK CODE** screen with "5555" flashing. Enter your 4-digit security code by pressing the  or  button to change the first digit, then press **Next**. Repeat the above process for the last 3 digits, then press the **Done** button.

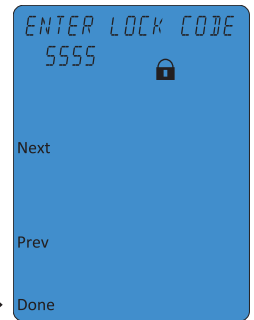

3. If the correct code is entered, **KEYPAD UNLOCKED** will appear in the message area of the screen. The thermostat will return to the main operating screen and the lock icon will no longer be displayed.

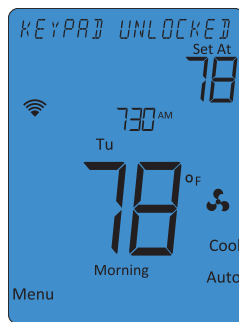

4. If an incorrect code is entered, the thermostat will return to the main operating screen, display the temporary message **UNLOCK FAILED**, continue to display the lock icon and remain in the locked mode.



# Troubleshooting

## Power Loss

The Peak Partners thermostat is designed to withstand a power loss without the need of a battery backup. The thermostat responds to a power loss as follows:

- All Thermostat Settings and Schedule Programming are stored to permanent memory and retained throughout the power loss.
- The thermostat will return to the same System Mode (Off/Heat/Cool/Aux) it was in prior to the power loss.
- A **Permanent Hold** will be maintained after a power loss.
- A **Temporary Hold** will be maintained after a power loss **ONLY** if still within the same Program Schedule time period. Otherwise the thermostat will return to operating according to the Program Schedule.
- The thermostat is designed to maintain the clock for at least 24 hours without power. If power has been lost for more than 24 hours, the clock will return to a factory default time and will update with the next utility time sync.
- A **Conservation Period** will be maintained after a power loss if still within the same conservation period.

### Common Problems: No Heat, No Cool, or No Fan

Possible Cause	Corrective Action
Blown fuse or tripped circuit breaker.	Replace fuse or reset breaker.
Furnace power switch set to <b>OFF</b> .	Turn switch to <b>ON</b> .
Furnace blower compartment door or panel is loose or not properly installed.	Replace door panel in proper position to engage safety interlock or door switch.

### No Heat or No Cool



Possible Cause	Corrective Action
Thermostat may be in a Peak Partners conservation period. "Event in Progress" will be displayed on top line of home screen.	Wait for the Peak Partners conservation period to end.
System switch is set to <b>OFF</b> .	Press the thermostat's <b>SYSTEM</b> button one or more times to select <b>HEAT</b> or <b>COOL</b> (as appropriate).

### Heat, Cool, or Fan Runs Constantly

Possible Cause	Corrective Action
Fan set to <b>ON</b> .	Change Fan to <b>AUTO</b> .

## Troubleshooting (continued)

### No Heat



Possible Cause	Corrective Action
Pilot light not lit.	If it will not stay lit, call for service from your HVAC contractor.
System switch not set to <b>HEAT</b> .	Press the thermostat's <b>SYSTEM</b> button one or more times to select <b>HEAT</b> and press  to raise the temperature setpoint above room temperature.
Furnace Lock-Out Condition. Heat may also be intermittent.	Many furnaces have safety devices that shut down when a lock-out condition occurs. If the heat works intermittently, contact the furnace manufacturer or your HVAC contractor for assistance.
Heating system requires service or thermostat requires replacement.	To diagnose this condition: Press <b>SYSTEM</b> button to select <b>HEAT</b> and press  to raise the temperature setpoint above room temperature. Within a few seconds the thermostat should make a soft click sound. This sound usually indicates the thermostat is operating properly. If the thermostat does not click after being reset, contact Peak Partners for a replacement thermostat. If the thermostat does click, contact the furnace manufacturer or your HVAC contractor for a service visit to verify the heating is operating correctly.

### Furnace or Air Conditioner Cycles Too Fast or Too Slow (Narrow or Wide Temperature Swing)

Possible Cause	Corrective Action
The location of the thermostat and/or the size of the heating system may be influencing the cycle rate.	Electronic thermostats, like this one, normally provide precise temperature control and may cycle faster than some older mechanical models. A faster cycle rate means the unit turns on and off more frequently to maintain the desired temperature, but runs for a shorter time so there is no increase in overall energy use.

## Troubleshooting (continued)

### No Cool

Possible Cause	Corrective Action
System switch not set to <b>COOL</b> .	Press <b>SYSTEM</b> button to select <b>COOL</b> and press  to lower the temperature setpoint below room temperature.
Outdoor unit disconnect or breaker tripped.	Verify the outdoor unit disconnect or breaker has not been tripped.
Cooling system requires service or thermostat requires replacement.	To diagnose this condition: Press <b>SYSTEM</b> button to select <b>COOL</b> and press  to lower the temperature setpoint below room temperature. Within a few seconds the thermostat should make a soft click sound. This sound usually indicates the thermostat is operating properly. If the thermostat does not click after being reset, contact your installing contractor for a replacement thermostat. If the thermostat clicks, contact the furnace manufacturer or HVAC contractor for a service visit to verify the cooling is operating correctly.

### Multi-stage Air Conditioner or Heat Pump: Second, Third, or Fourth Stage Won't Come On

Possible Cause	Corrective Action
Your thermostat is designed to determine the optimum time to activate the second stage. Simply raising the temperature in heating or lowering it in cooling will not always force the thermostat to bring the second stage on quickly. There is a time delay of 0 to 30 minutes depending on the performance of the first stage of the system.	Wait for the second, third, or fourth stage to come on.

